

## AMENDMENTS FOR USERS OF THE NEW DIGITAL GAUGE V3

### 9. Changing the gauge battery





For users of Digital Gauge v3, the battery (PP3) is changed by removing the front of the unit as described in section 10 on page 14).

Remove the x5 M4 dome head screws with the allen key provided. Once undone the case will simply lift off.

This allows access to the gauge. The battery is now located within the gauge and can be replaced from here (see below).

If required, remove the gauge, reach inside the case and disengage the gauge from the hydraulic coupling by pulling the coupler connector back.

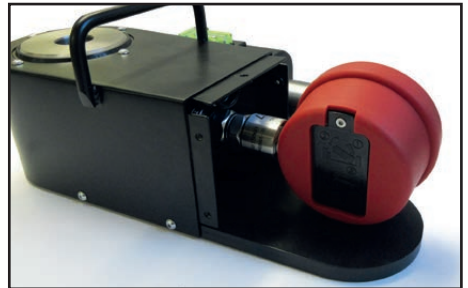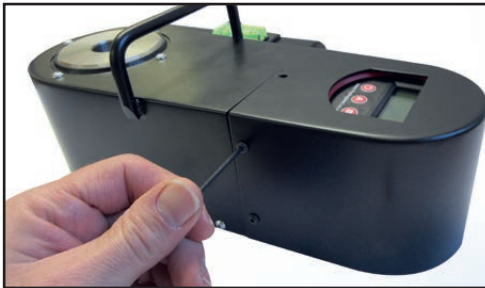


### Low battery



When the battery is low an indicator will appear on screen.

The battery is changed by unscrewing the cover on the back of the gauge.

#### Remove battery

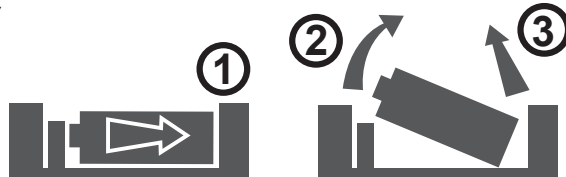

#### Fit battery

